




Select Series

Select from a variety of profiles and thermofoils to design your own doors and drawer fronts. Create a unique look to suit any decor and personalize your kitchen, bath or home office.

To design your own doors and drawer fronts use your Northern Contours order form and follow these steps:

1 Door Style Options

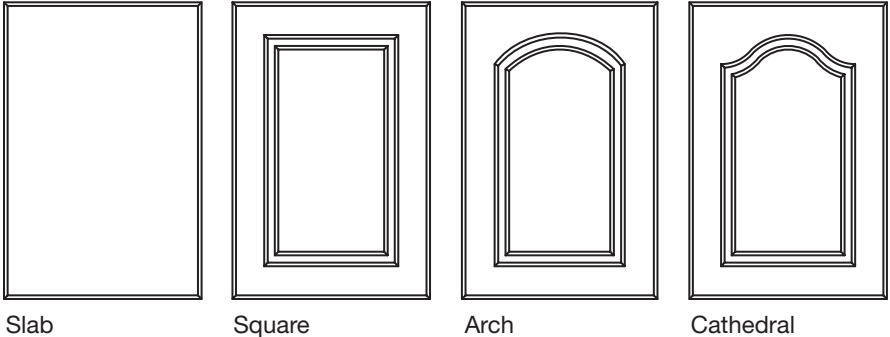

2 Inside Profile Options


2 Pass profiles, A511, and A901 will have radius corners.




Most 3, 4 and 5 Pass profiles will have square corners.




2 Pass

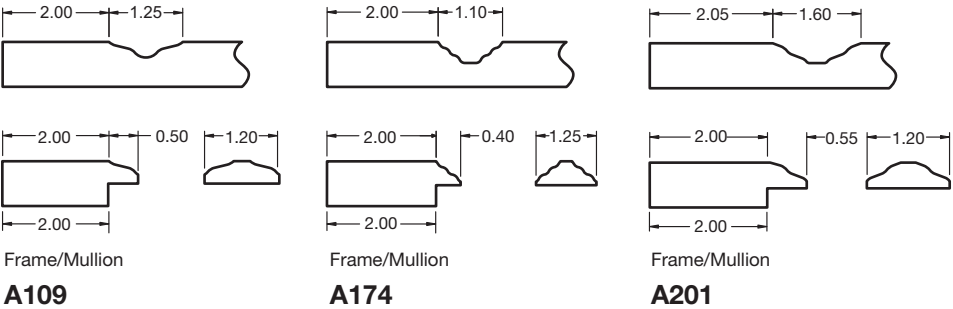

3 Pass


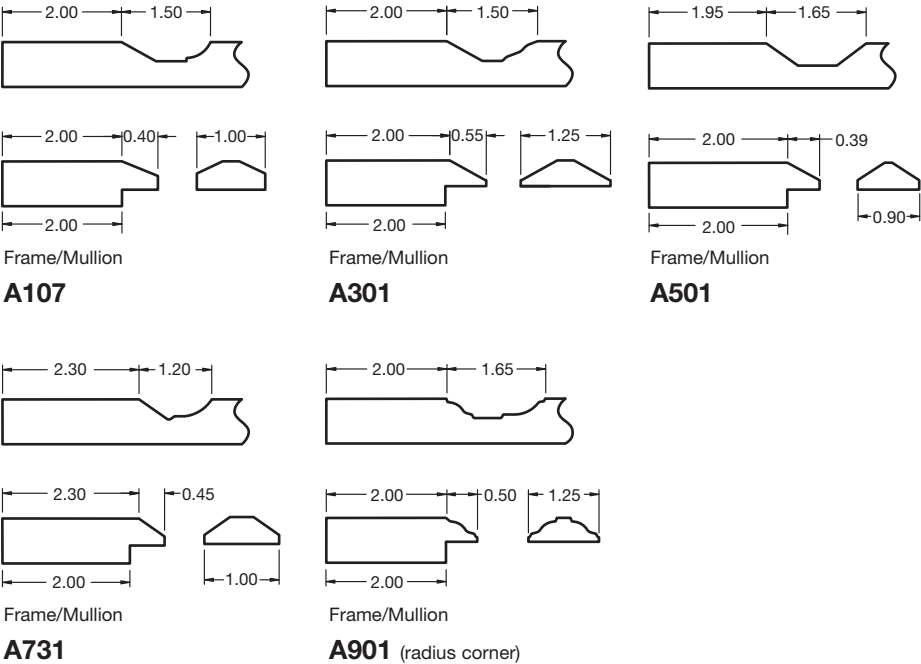


2 More Inside Profile Options


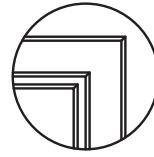


Most 3, 4 and 5 Pass profiles will have square corners.



4 Pass

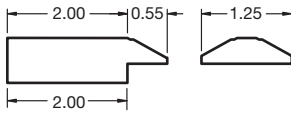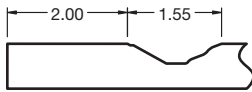



Frame/Mullion
A302

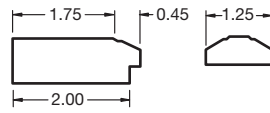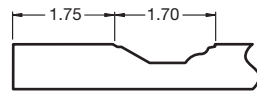

Frame/Mullion
A401

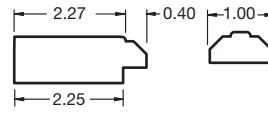
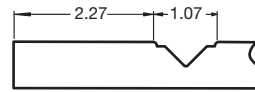


Frame/Mullion
A402





Frame/Mullion
A403



5 Pass





Frame/Mullion
A105



Frame/Mullion
A511 (radius corner)




Frame/Mullion
A951




Frame/Mullion
A961


3 Outside Profile Options




B099




B111




B038




B127




B104




B110




B132



B102



B158



B108